


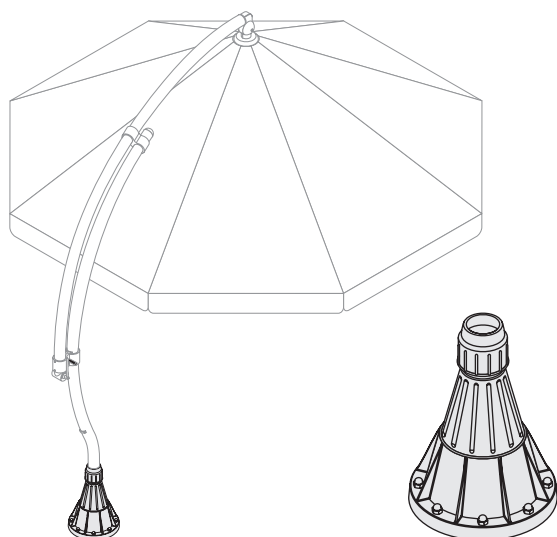

Aufbauanleitung

Bodenständer

für den

Easy Sun PARASOL Ampelschirm

Einleitung

Die folgende Anleitung enthält Hinweise zur Aufstellung und Pflege des Bodenständers für den Easy Sun Parasol Ampelschirm.

Lesen Sie die Montageanleitung vor dem Aufstellen des Bodenständers sorgfältig durch. Schäden, die durch Nichtbeachtung der Anleitung entstehen, sind von jeglicher Haftung und Gewährleistung ausgeschlossen.

Die in der Anleitung beschriebene Montage ist für Personen gedacht, die mit dem sicheren Umgang der zu verwendenden Werkzeuge und den entsprechenden Sicherheitsrichtlinien vertraut sind.

Sun Garden GmbH • Emsdettener Straße 233 • D-48485 Neuenkirchen

Internet: www.sun-garden.de

Änderungen aufgrund technischer Verbesserungen können ohne Voranzeige vorgenommen werden.
Die vorliegende Anleitung darf weder vollständig noch teilweise ohne vorherige Zustimmung von
SUN GARDEN nachgedruckt oder vervielfältigt werden.

Inhaltsverzeichnis

1.0 Sicherheitshinweise	2	4.5 Aufdübeln der Aluminium-Bodenplatte	6
1.1 Wichtige Symbole	2	4.6 Bodenständer aufschrauben	7
1.2 Sicherheitshinweise	2	4.7 Reduzierhülse einsetzen	8
2.0 Lieferform und Lieferumfang	3	5.0 Pflege	9
3.0 Bauteile des Bodenständers	3	6.0 Lagerung	9
3.1 Bodenständer	3	7.0 Wartung	9
3.2 Reduzierhülsen	3	8.0 Service-Center / Ersatzteil-	
4.0 Bodenständer aufstellen	4	versorgung	10
4.1 Platzbedarf	4	9.0 Entsorgung	10
4.2 Prüfen der vorhandenen Fundamente		10.0 Technische Daten	10
oder Betonplatten	5	11.0 Garantie	10
4.3 Erstellen neuer Fundamente	5	Garantieschein	11
4.4 Bodenplatte vorbereiten	6		

1.0 Sicherheitshinweise

1.1 Wichtige Symbole

In der Anleitung sind spezielle Informationen mit folgenden Grafiken gekennzeichnet:



Achtung!

Dieses Symbol kennzeichnet Hinweise, die auf Unfall- und Verletzungsgefahren hinweisen.



Hinweis

Unter diesem Symbol finden Sie allgemeine Tipps zur Handhabung.



Hinweis

Unter diesem Symbol finden Sie Hinweise, die einer Beschädigung des Bodenständers vorbeugen.

1.2 Sicherheitshinweise



Achtung: Kippgefahr des Sonnenschirmes!

- Montieren Sie den Bodenständer nur auf festem Untergrund.
- Sorgen Sie immer für einen festen Stand und sichere Verschraubung des Bodenständers.





Achtung: Unfallgefahr!

- Verwenden Sie nur passende und einwandfreie Werkzeuge.
- Beachten Sie die Sicherheitshinweise der entsprechenden Werkzeuganleitungen.

4.0 Bodenständer aufstellen

4.1 Platzbedarf

Achten Sie bei der Auswahl des Stellplatzes für den Easy Sun PARASOL - Ampelschirm auf ausreichend Abstand zu angrenzenden Objekten wie Gebäude, Bäume, usw.
Die folgenden Skizzen zeigen Ihnen den Bedarf an Stellfläche eines geöffneten Ampelschirmes.

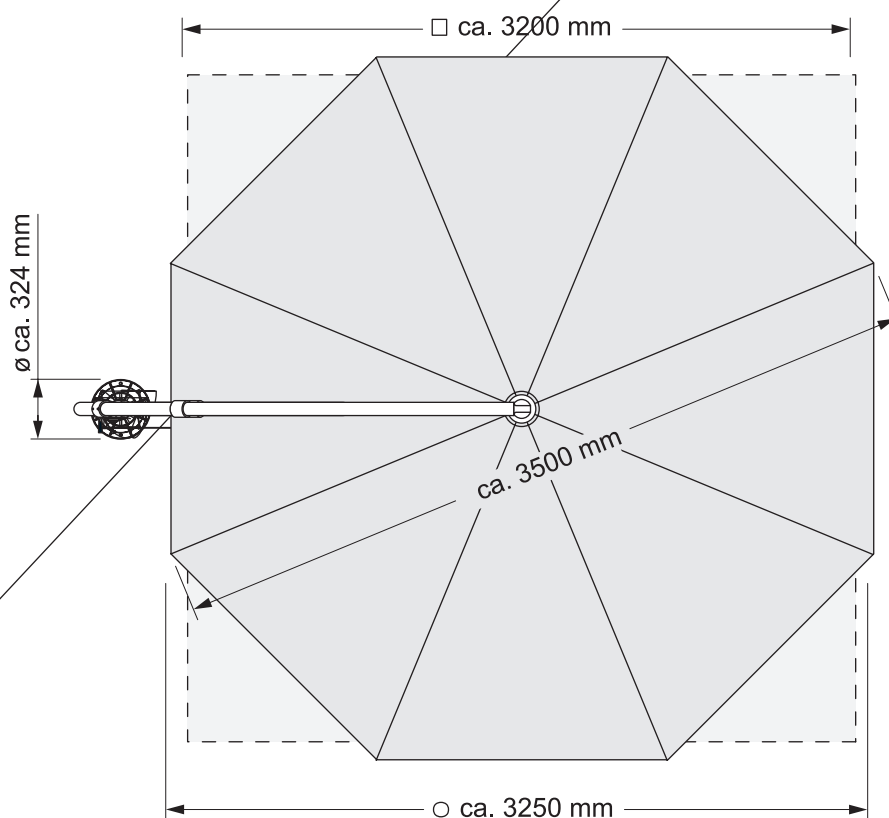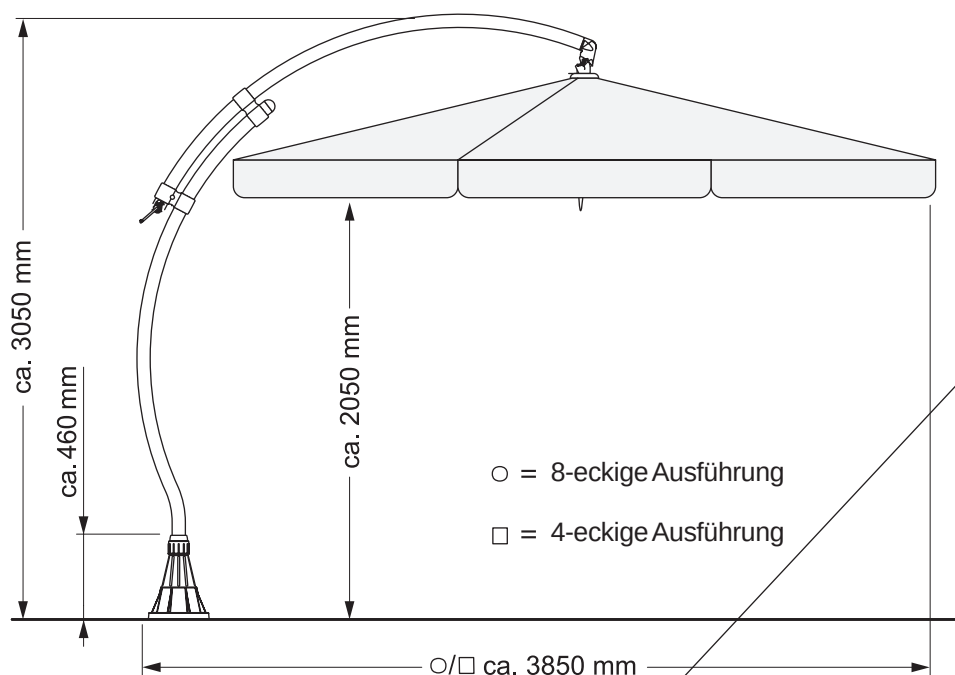



Hinweis

Prüfen Sie den Inhalt der Verpackung anhand des Lieferumfanges (Kapitel 1.0) bevor Sie mit der Montage beginnen.
Sollten Bauteile fehlen, setzen Sie sich mit Ihrem Händler in Verbindung.

4.2 Prüfen der vorhandenen Fundamente oder Betonplatten

Falls Sie den Bodenständer auf ein vorhandenes Fundament oder eine Betonplatte montieren wollen, müssen Sie vorher deren Beschaffenheit prüfen.

Benötigtes Werkzeug:

- ☐ Wasserwaage


Folgende Punkte müssen geprüft werden:

- Die Betongüte des vorhandenen Fundamentes oder der Betonplatte muß mindestens B 25 betragen.
- Die Masse der Fundamente müssen folgenden Mindestanforderungen entsprechen:

Mindestdicke D = 15 cm

Mindestbreiten (B1 und B2) = 93 cm

- Die Oberfläche des Fundamentes oder der Betonplatte muß waagrecht sein (mit Wasserwaage prüfen).

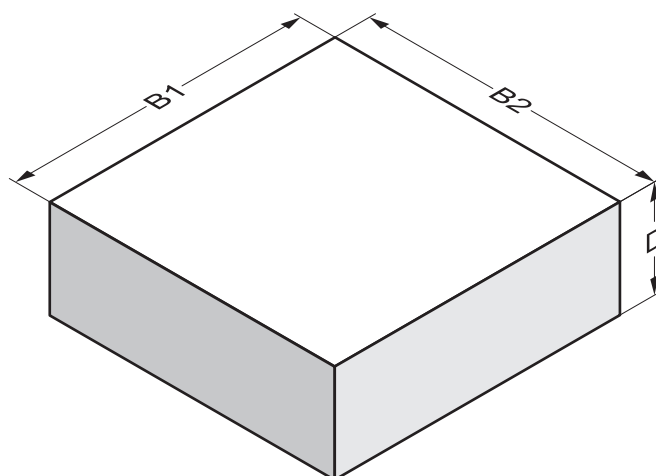

Achtung: Unfallgefahr!

- Sollte das vorhandene Fundament oder die Betonplatte den Anforderungen nicht entsprechen, muß ein neues Fundament erstellt werden.

4.3 Erstellen neuer Fundamente


Die Betongüte des Fundamentes muß B 25 betragen.


Die kleinste erforderliche Fundamentgröße muß 65 x 65 x 50 cm betragen.



Hinweise

- Angaben zu Betongüten, Mischungsverhältnissen und Ausführung des Fundamentes erfragen Sie bitte bei einem Baustoffhändler in Ihrer Nähe.
- Bevor Sie mit der Montage fortfahren, muß das Fundament *mindestens 48 Stunden* aushärten.

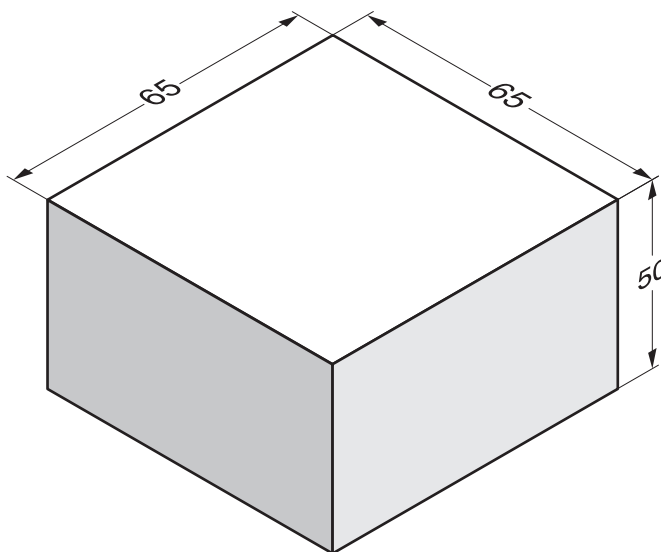

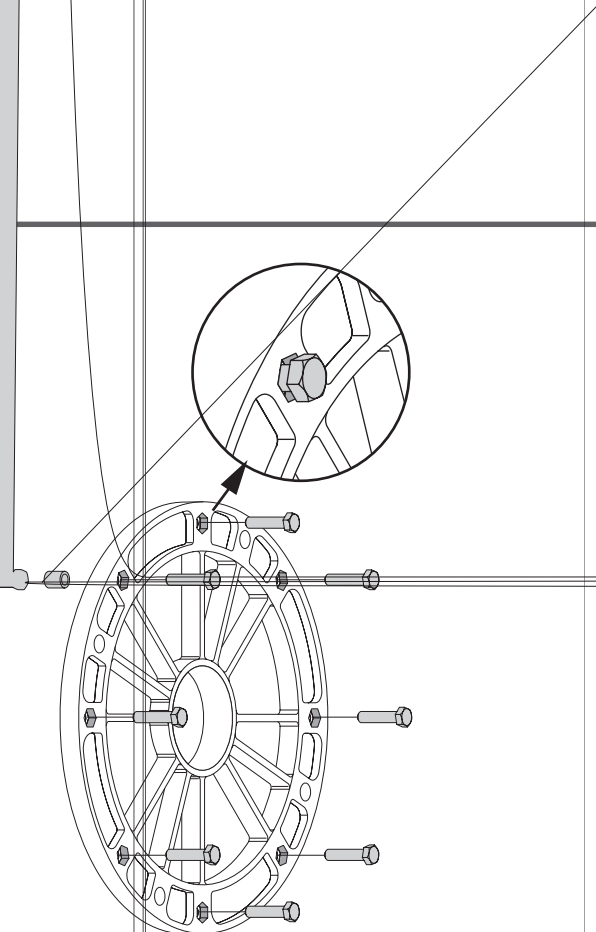


- Setzen Sie die Bodenanker in die Bohrungen der Bodenplatte und des Fundamentes ein.
- Schlagen Sie die Bodenanker in das Fundament ein, bis die Schraubenköpfe an der Bodenplatte anliegen.




Hinweis

Achten Sie beim Einschlagen darauf, dass Sie die Schraubenköpfe nicht beschädigen.

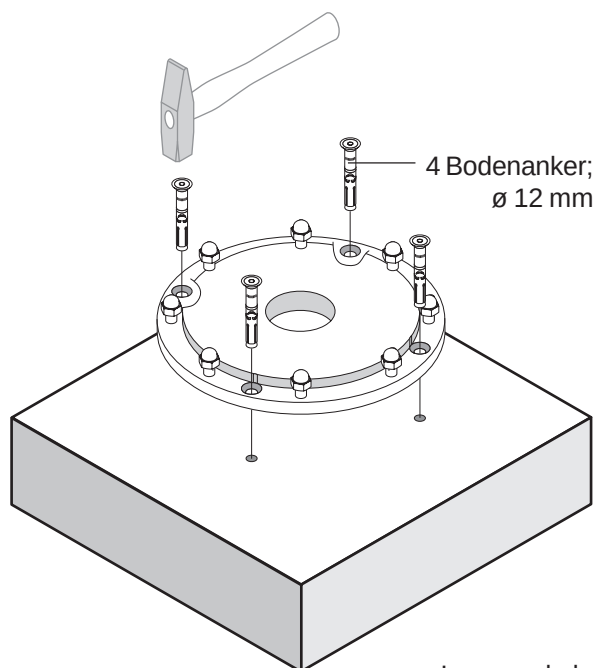

- Fixieren Sie die Aluminium-Bodenplatte durch Festdrehen der Bodenanker.

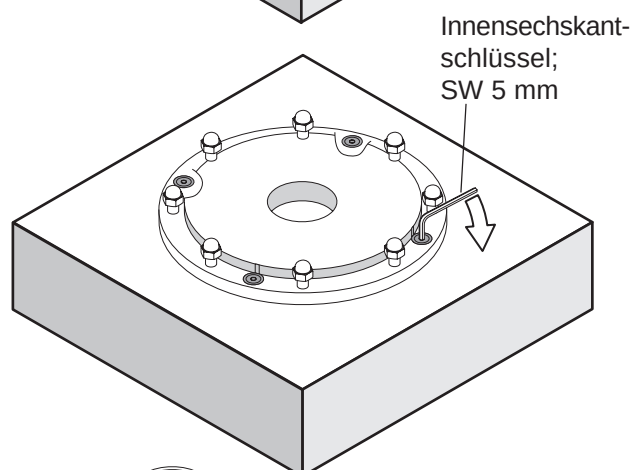


4.6 Bodenständer aufschrauben

Benötigtes Werkzeug:

- ❑ Ringschlüssel; Schlüsselweite (SW) 13 mm

Montagefolge:

- Entfernen Sie die Muttern und Abstandshülsen von den Befestigungsschrauben.
- Setzen Sie den Bodenständer auf die Befestigungsschrauben der Bodenplatte auf.
- Legen Sie die Abstandshülsen über die Befestigungsschrauben in die Bohrungen des Bodenständers ein.
- Verschrauben Sie den Bodenständer unter Verwendung der Unterlegscheiben mit den Muttern (SW 13 mm) an der Bodenplatte.
- Ziehen Sie die Befestigungsschrauben mit dem Ringschlüssel fest.

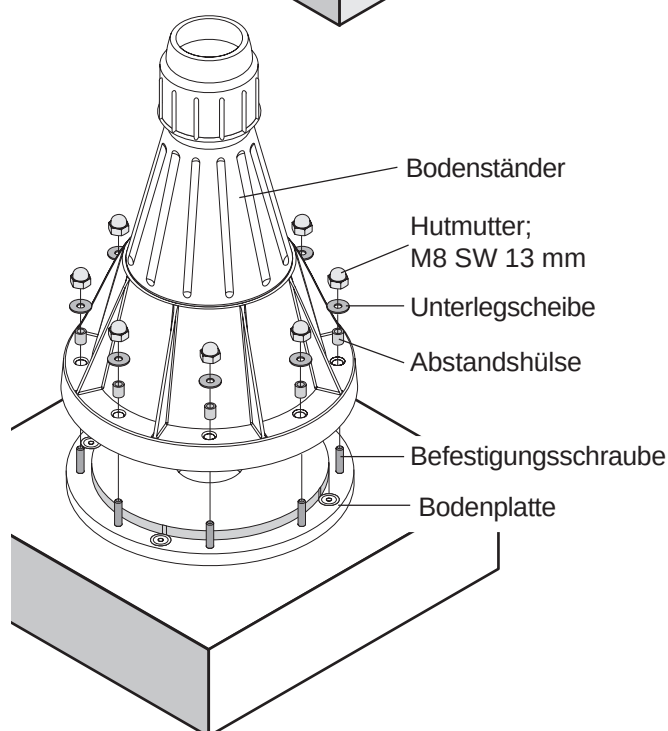

ahme

ed

nos in den
etzen können.

denständers
hen der

ne

Stand: 09.2004


5.0 Pflege

Reinigen Sie alle Kunststoff-Bauteile mit einem feuchten Tuch. Starke Verschmutzungen entfernen Sie am besten mit einem milden, scheuermittelfreien Reinigungsmittel.



Hinweis

Verwenden Sie zum Reinigen keine scharfkantigen Werkzeuge (Messer, Metallspachtel), aggressive Lösungsmittel oder scheuermittelhaltige Reiniger. Um Schäden an den Bauteiloberflächen zu vermeiden, beachten Sie die Anwendungshinweise des Reinigungsmittels.

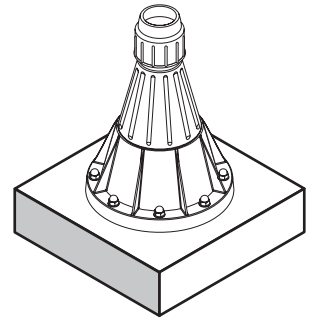

6.0 Lagerung


Über die Wintermonate muss der Bodenständer an einem trockenen und frostsicheren Ort aufbewahrt werden.



Hinweis


Nutzen Sie zum Einlagern nach Möglichkeit die Originalverpackung des Bodenständers.

- Bodenständer gründlich reinigen.
- Bodenständer wie folgt von der Bodenplatte abschrauben.
- Alle Teile trocknen lassen und einlagern.

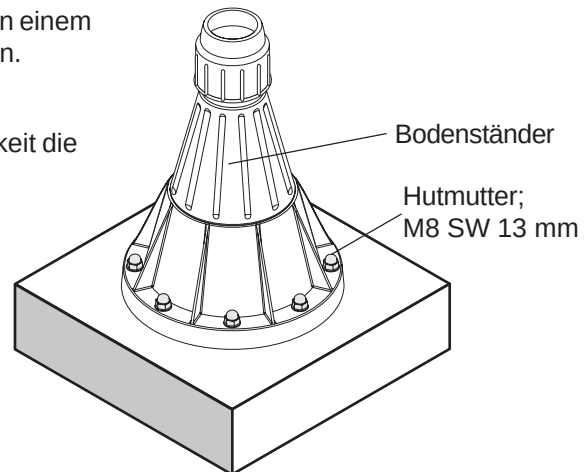

Bodenständer von der Bodenplatte entfernen:

- Lösen Sie die Hutmutter und entfernen Sie den Bodenständer von der Bodenplatte.
- Stecken Sie zum Schutz des Gewindes die Abstandshülsen und Unterlegscheiben auf die Schraubengewinde und drehen Sie die Hutmuttern handfest auf.

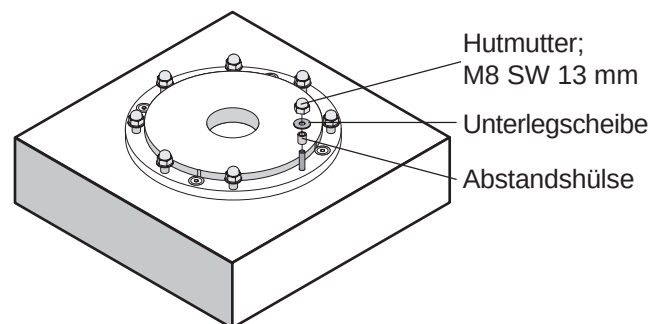

7.0 Wartung

Einmal jährlich, vor dem ersten Aufstellen oder vor dem Einlagern, sollten Sie den Bodenständer einer gründlichen Prüfung auf beschädigte Bauteile unterziehen.

8.0 Service-Center / Ersatzteilversorgung


Bei Fragen zur Instandsetzung, zur Anforderung unseres Reparaturservices, sowie zur Ersatzteilbestellung wenden Sie sich bitte an eines unserer Service-Center (siehe Infoblatt *Service-Center / Ersatzteilversorgung*) oder besuchen Sie uns im Internet unter www.sun-garden.de.

9.0 Entsorgung

Der Bodenständer kann dem Wertstoffkreislauf für Kunststoffe übergeben werden.

10.0 Technische Daten

Gesamthöhe (H): = 460 mm
Durchmesser (d): = 324 mm
Gewicht: = ca. 5,0 kg

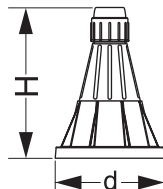

11.0 Garantie

Die Sun Garden GmbH, Emsdettener Straße 233, 48485 Neuenkirchen, gewährt auf ihre Produkte eine Garantie von 2 Jahren in der Weise, dass die Sun Garden GmbH Teile, die aufgrund von Material- oder Fabrikationsfehlern defekt geworden sind, nach ihrer Wahl austauscht oder repariert.

Von der Garantie ausgenommen sind:

- Schäden, die durch Nichtbeachtung der Montage- und Bedienungsanleitung oder durch eigenmächtige Reparaturen entstehen.
- Produkte, bei denen die Fabrikations-Nr. entfernt oder zerstört ist.
- Schäden durch höhere Gewalt.

Zum Nachweis von Garantieansprüchen ist der vollständig ausgefüllte Garantieschein und der Kaufbeleg (Zahlungsbeleg) vorzulegen.

Die Garantiefrist beginnt mit dem Tag des Kaufes.

Zwecks Abwicklung von Garantieansprüchen gehen Sie bitte folgendermaßen vor:

- Füllen Sie den Garantieschein vollständig mit einer kurzen Mängelbeschreibung aus.
- Legen Sie Ihren Kaufbeleg dem Garantieschein bei.
- Bringen Sie den kompletten Artikel (Einzelteile siehe Lieferumfang) zum Händler zurück, dieser übernimmt für Sie die Garantieabwicklung.

Durch diese Garantie werden die Mängelansprüche des Käufers auf Nacherfüllung, Rücktritt, Minderung oder Schadenersatz gegen den Verkäufer nicht eingeschränkt.



Hinweis

Um weitere Beschädigungen zu vermeiden, verwenden Sie zum Transport des Artikels nach Möglichkeit die Originalverpackung.

Garantieschein

Kaufdatum: _____

Käuferadresse:


Händleradresse:

Händlerstempel und Unterschrift:

Mängelbeschreibung in Stichpunkten:

heraustrennen oder kopieren



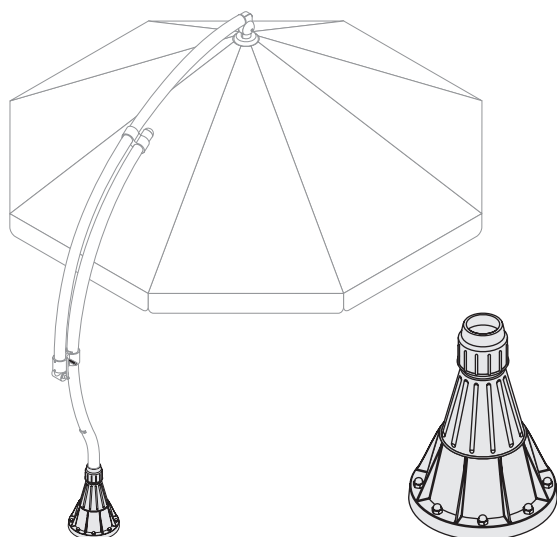

Assembly Instruction

Bottom Pole

for The

Easy Sun PARASOL Sunshade

Introduction

The following instructions contain information about construction and care of the Easy Sun Parasol sunshade Bottom Pole.

Please read the instructions carefully through before setting up the Bottom Pole. Damages caused by non-observance of the instructions are excluded from any liability and guarantee.

The work described in these instructions is intended only for persons with experience of using the tools required.

Sun Garden GmbH • Emsdettener Straße 233 • D-48485 Neuenkirchen

Internet: www.sun-garden.de

We reserve the right to make alterations without prior notice due to technical improvements.
The following manual may neither be reprinted or copied without the prior consent of
SUN GARDEN.

Contents

1.0 Safety information	2	4.5 Fixing the aluminium floor plate	6
1.1 Important symbols	2	4.6 Screwing in the floor stands	7
1.2 Safety information	2	4.7 Insert reducer socket	8
2.0 Supply form / Delivery	3	5.0 Care	9
3.0 Bottom Pole Components	3	6.0 Storage	9
3.1 Bottom Pole	3	7.0 Maintenance	9
3.2 Reducer sockets	3	8.0 Service Centre /	
4.0 Setting up Bottom Pole	4	spare part supply	10
4.1 Space requirement	4	9.0 Disposal	10
4.2 Checking existing foundations or		10.0 Spezifications	10
concrete slabs	5	11.0 Guarantee	10
4.3 Making the foundation	5	Guarantee certificate	11
4.4 Preparing the floor plate	6		

1.0 Safety information

1.1 Important symbols

Special information is labelled with the following graphics in the manual:



Caution!

This symbol identifies information which refers to danger of injury and accident.



Note

This symbol identifies general tips for handling.



Note

This symbol identifies information which can avoid damage to the Bottom Pole.

1.2 Safety information



Caution: *Tipping hazard!*

- Only set the Bottom Pole up on firm foundations.
- Always ensure that the Bottom Pole is firmly seated.

2.0 Supply form / Delivery



Note

All our products undergo rigorous testing for quality and completeness before delivery. Check the contents of the Bottom Pole packaging before starting assembly. If any components are missing or faults can be seen please contact your dealer. If possible you should keep the packaging for any guarantee work which may be necessary.


The Bottom Pole is delivered in stable cardboard packaging.

Dimensions: 330 x 330 x 420 mm (13'' x 13'' x 16.5'')

Total weight: 6.5 kg (14.5 lbs.)

The following components are contained in the packaging

- ① one union nut
- ② one reducer socket No. 1;
for stand tube diameter 40 - 55 mm (1.6'' - 2.0'')
- ③ one reducer socket No. 2;
for stand tube diameter 56 - 70 mm (2.2'' - 2.75'')
- ④ one stand tube seat
- ⑤ one spacing piece
- ⑥ one aluminium floor plate
- ⑦ eight fixing bolts (M 8 x 35 mm)
with spacer bushes, washers
and cap nut
- ⑧ four floor anchors (ø 12 mm)
- ⑨ one assembly tube
- ⑩ Allen key
- ⑪ one assembly instruction

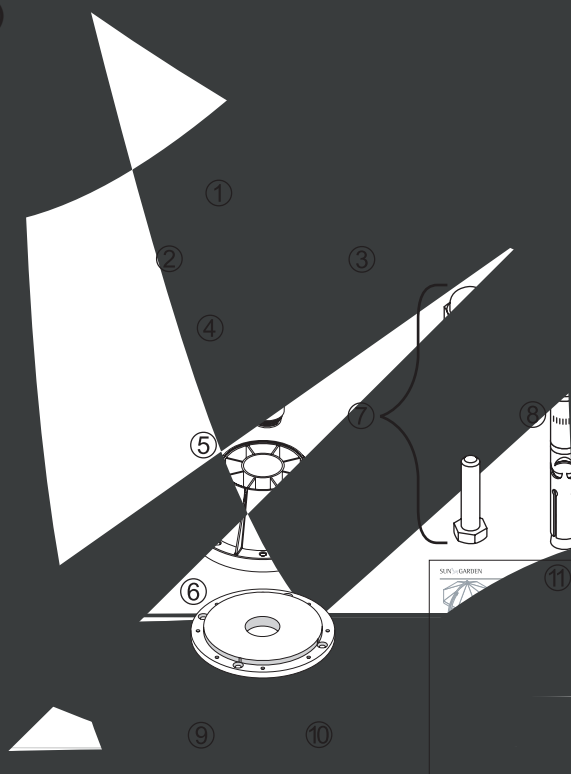

3.0 Bottom Pole Components

3.1 Bottom Pole

The Bottom Pole is manufactured from weather-resistant and shockproof plastic and is therefore insensitive to damage.

It is intended for fixing onto new or existing foundations.

Assembly takes place by screwing to a floor plate to which the floor stand is bolted.

This construction allows the Bottom Pole to be removed at any time without great effort (see "storage" chapter).

— Union nut

Reducer socket No. 1
(40 - 55 mm)

— Reducer
socket

— Stand tube
seat

Reducer socket No. 2
(56 - 70 mm)

— Spacing piece

— Aluminium
floor plate



3.2 Reducer sockets

Thanks to the use of different reducer sockets the sunshade Bottom Pole can be used with standard diameters of between 40 - 70 mm (1.6'' - 2.75'').

4.0 Setting up Bottom Pole

4.1 Space requirement

When selecting the location for your Easy Sun PARASOL sunshade make sure there is enough space between it and any nearby buildings, trees etc. The following sketches show you the space required by an opened sunshade.

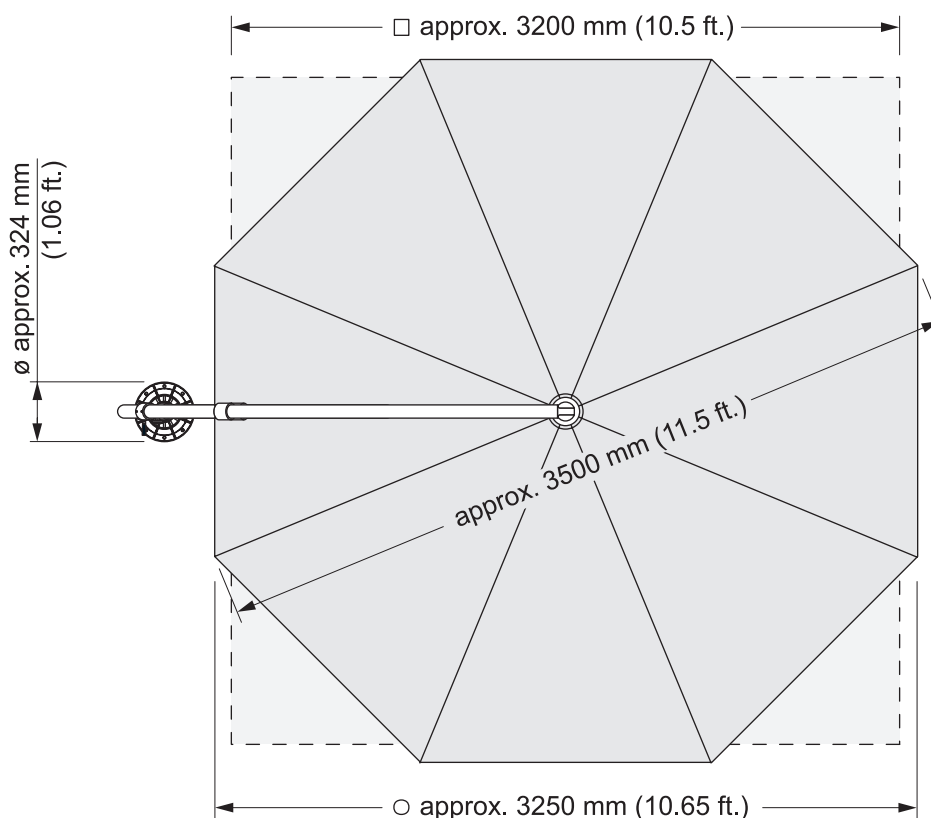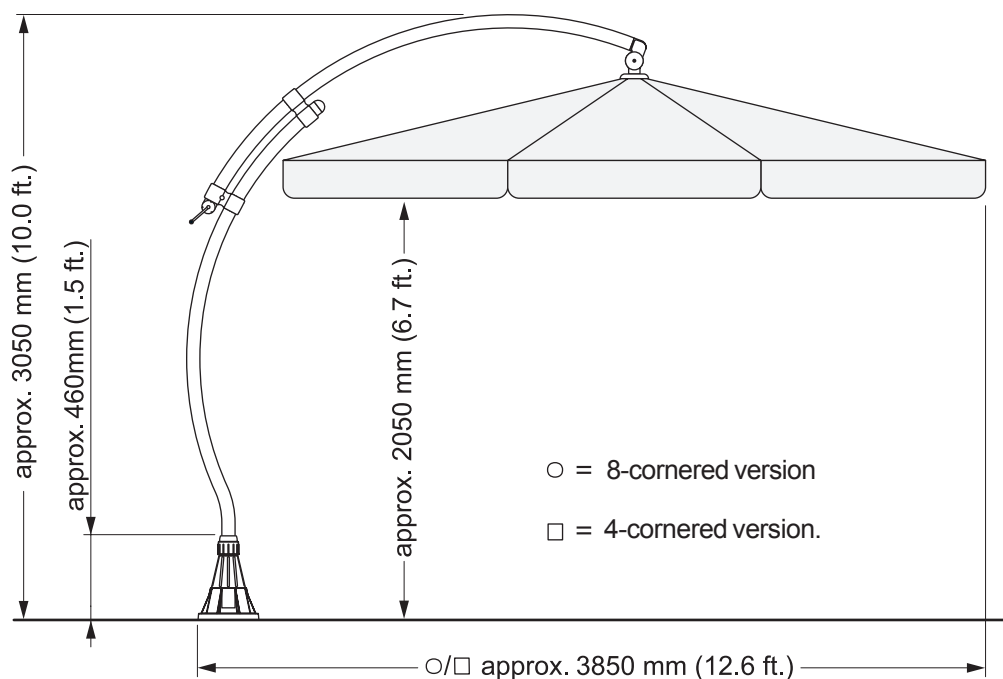



Note

Check the contents of the packaging before starting assembly (chapter 1.0).
If any components are missing please contact your dealer.

4.2 Checking existing foundations or concrete slabs

If you intend setting the Bottom Pole up on an existing foundation or concrete slab, you must first check its suitability.

Tool required:


- ☐ spirit level

The following points must be checked:

- The concrete quality in the existing foundation or the concrete slab must be B 25 at least.
- The foundation or slab must have at least the following dimensions:

minimum thickness D = 15 cm (5.9'')
minimum width (B1 and B2) = 93 cm (36.5'')

- The surface of the foundation for concrete slab must be horizontal (check with spirit level).

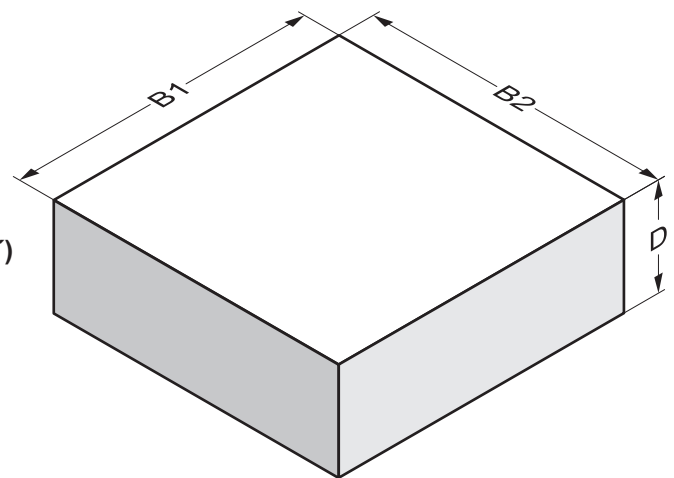

Caution: **Risk of accidents!**

- If the existing foundation or concrete slab does not fulfill the requirements, you will have to construct a new foundation.

4.3 Making the foundation


The foundation must be constructed in concrete of class B 25.

The smallest foundation size permissible is 65 x 65 x 50 cm (25.5'' x 25.5'' x 19.7'').




Note

- Please contact your local building materials supplier for information about concrete classes, concrete mixtures and construction of the foundation.
- Before continuing the sunshade assembly, the concrete must harden *for at least 48 hours*.

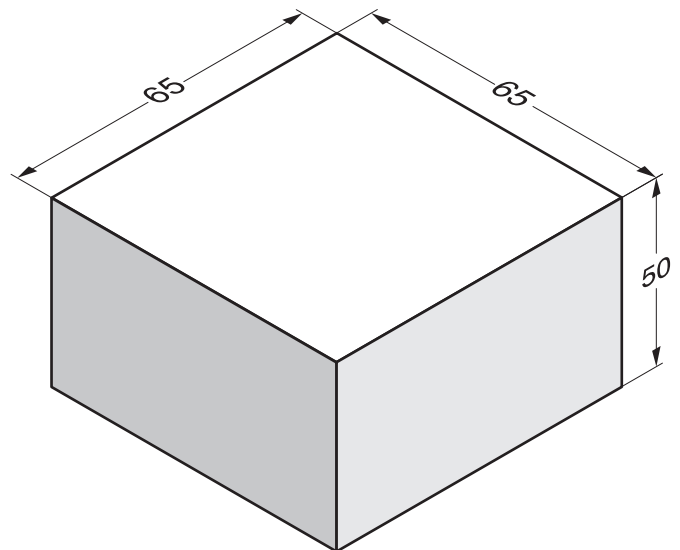

4.4 Preparing the floor plate

- Insert the eight M8 fixing bolts into the floor plate drill holes from below.
- Insert the bolt heads into the hexagonal receptacles (see detail) in the floor plate.
- Secure the fixing bolts against falling out by pushing on the spacer bushes and screwing on the cap nuts.

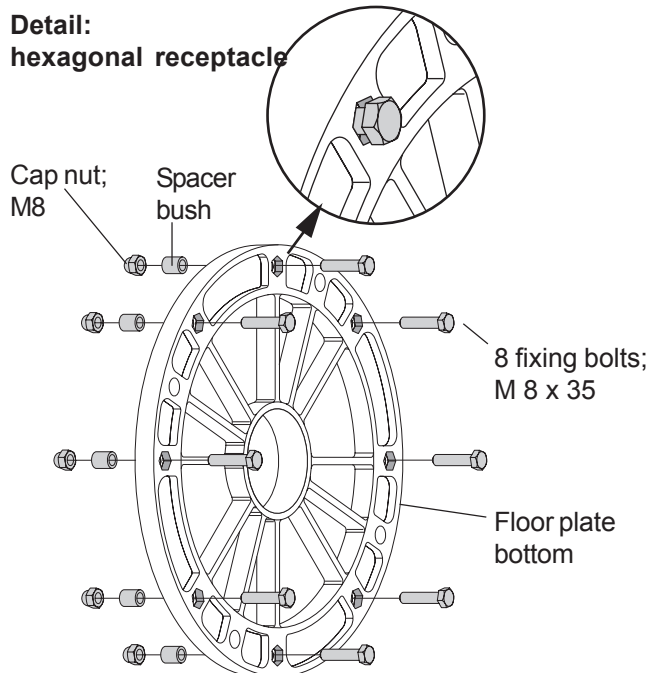

4.5 Fixing the aluminium floor plate

Tools required

- ☐ hammer drill
- ☐ masonry drill $\varnothing$ 12 mm (0.5'')
- ☐ hammer
- ☐ marking pencil
- ☐ Allen key, size 5 mm

Assembly sequence:


- Place the aluminium floor plate on the foundation or slab.

The distance (x) between aluminium floor plate and foundation edges is dependent on the foundation width b.

Foundation width (b) 90 cm (36.5'') =
Set aluminium floor plate up centrally

Foundation width (b) over 90 cm (36.5'')
= minimum distance x = 30 cm (12'')

- Now mark the position of the four fixing holes on the concrete.

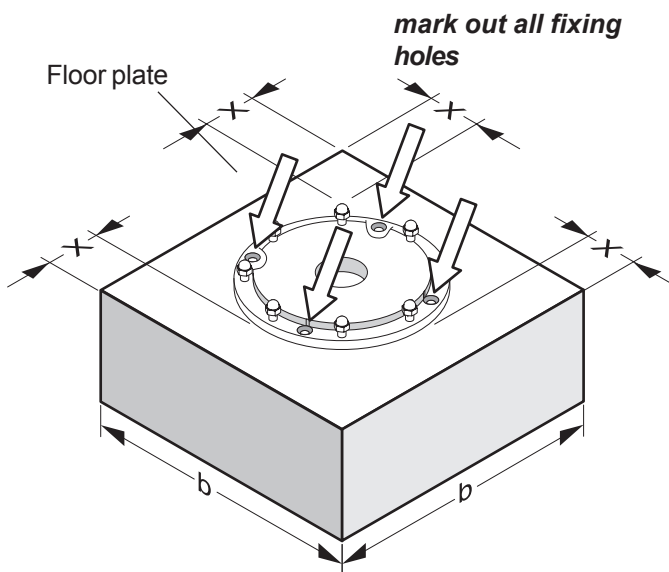

- Remove the aluminium floor plate and drill the rawlplug holes into the foundation or slab.


Hole diameter $\varnothing$ = 12 mm (0.5'')
maximum hole depth = 100 mm (3.9'')




Note

When drilling the rawlplug holes ensure that:

- the drill does not slip away from the markings
- the holes are plumb
- you keep to the minimum hole depth

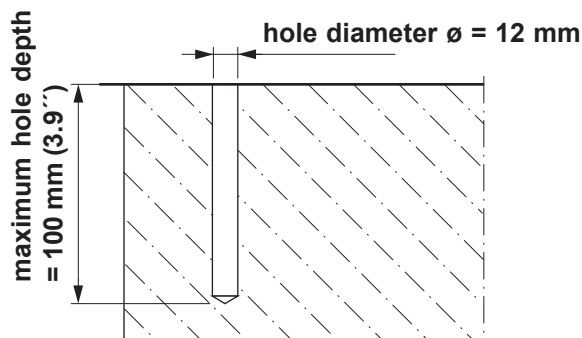

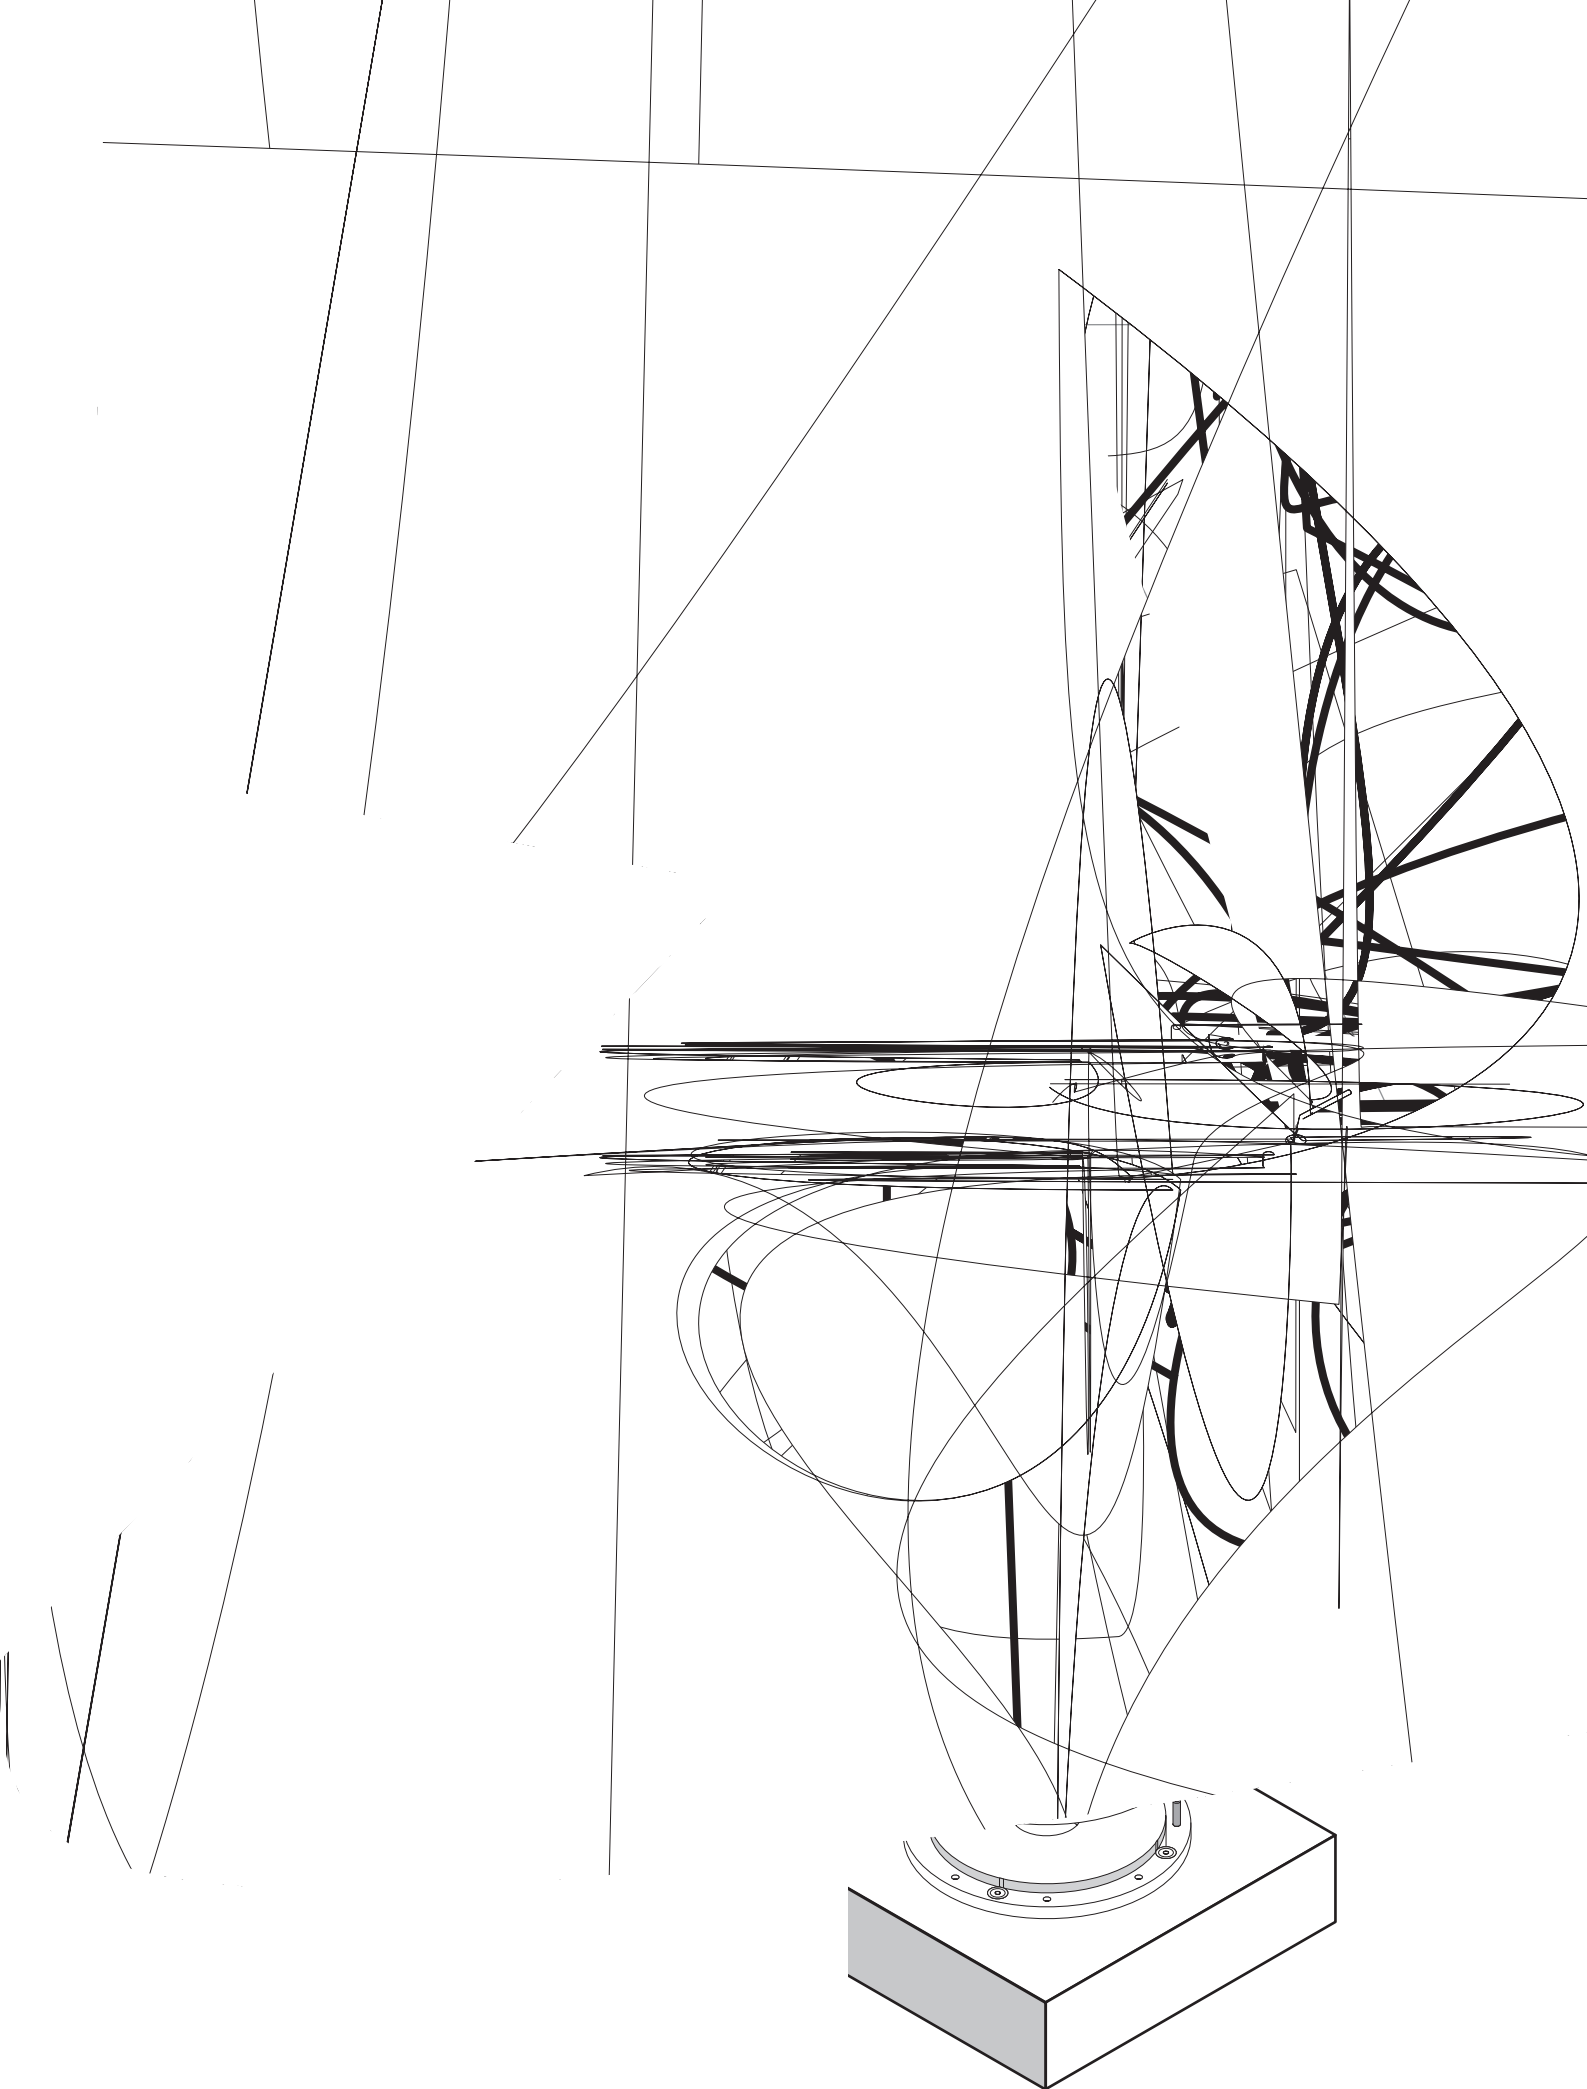



- ✧ Tighten the stand tube seat using the assembly tube.
When tightening, make sure that the stand tube seat locates in the spacer guide edge (see detail).



Note

Correct seating of the Bottom Pole is only achieved when the stand tube seat is tightened with the assembly tube.

Detail: guide in spacing piece

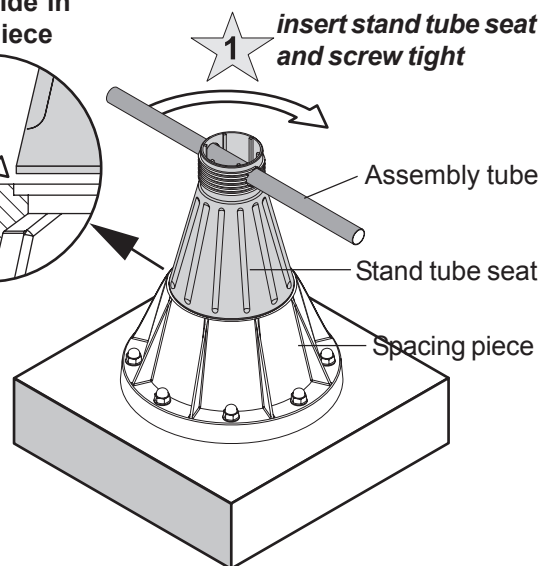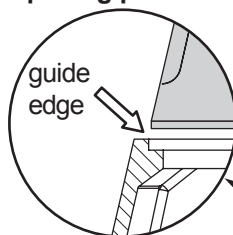

4.7 Insert reducer socket


- ✧ Insert the reducer socket no. 2 for standard tube diameters 56 - 70 mm (2.2'' - 2.75'') in the stand tube seat.
The grooves in the reducer socket must locate in the stand tube seat guides (see detail sketch).




Note

Reducer socket no. 1 included in delivery is for use with smaller sunshades with a stand tube diameter of 40 - 55 mm (1.6'' - 2.0'') together with our Bottom Pole.

Insert reducer socket

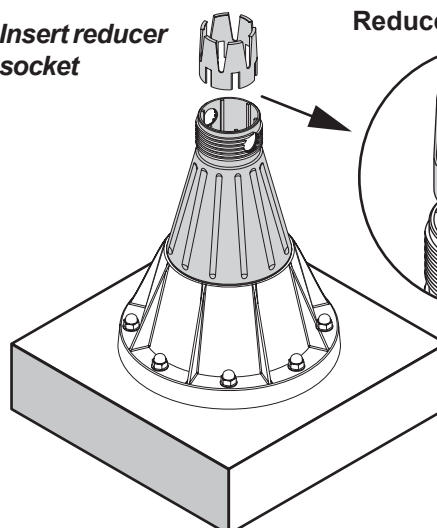

Detail: Reducer socket No. 2

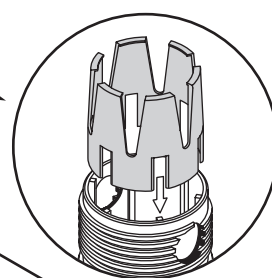


- ✧ Prevent the reducer socket from falling out by screwing on the union nut.



Note

Screw the union nut no more than three turns down, so that you can fit the sunshade in the Bottom Pole easily.

Screw on union nut

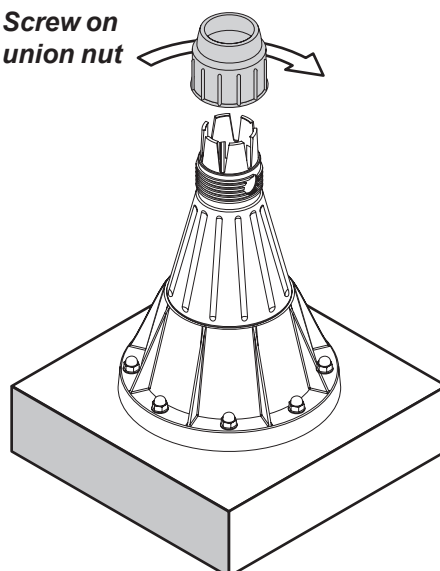

5.0 Care


Clean all plastic components with a damp cloth. You can best remove heavy soiling with a mild detergent free of scouring agents.



Note

When cleaning do not use sharp-edged tools (knives, metal scrapers), aggressive solvents or cleaners containing scouring agents.

To avoid damage to component surfaces please observe the instructions for use provided with the cleanser.

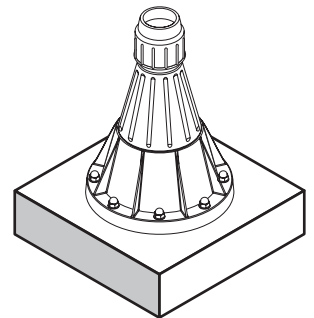

6.0 Storage

The Bottom Pole must be stored in a dry and frost-free location over the winter.





Note

If possible you should use the original Bottom Pole packaging for storage.

- Clean floor stands thoroughly.
- Unscrew the floor stands from the floor plate as described below.
- Allow all parts to dry, and then store.

Removing the floor stands from the floor plate:

- Loosen the cap nuts and remove the floor stands from the floor plate.
- To protect the thread, place the spacer bushes and washers over the bolt threads and tighten the cap nuts hand tight.

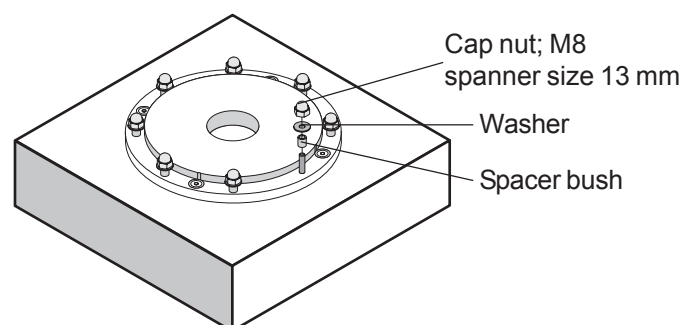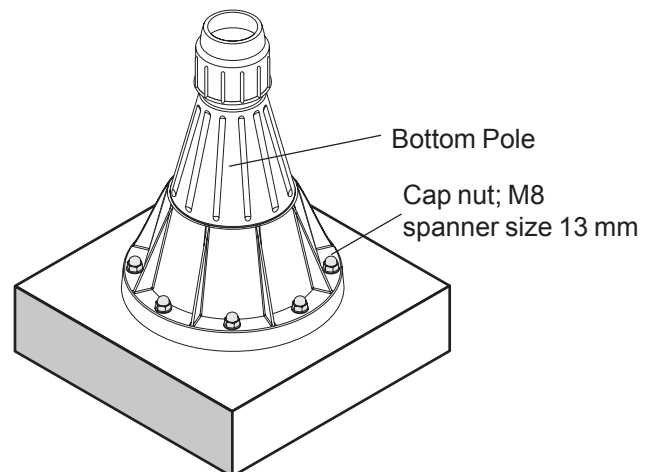

7.0 Maintenance

You should carry out a thorough inspection of the Bottom Pole for damaged components once a year, before the first setting up or before storage.

8.0 Service Centre / spare part supply


If you have any questions about setting up, require our repair service or wish to order spare parts, please contact one of our Service Centres (see Service Centre / ordering spare parts information sheet) or visit our Internet site at www.sun-garden.de.

9.0 Disposal

The Bottom Pole for finished floors can be disposed of in plastic recycling waste.

10.0 Spezifications

Total height: = 460 mm (18.1'')
Diameter: = 324 mm (12.96'')
Weight: = approx. 5.0 kg (11.4 lbs)

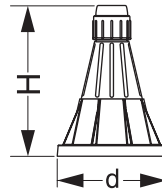

11.0 Guarantee

Sun Garden GmbH, Emsdettener Straße 233, 48485 Neuenkirchen, gives a product guarantee of two years on the basis that Sun Garden GmbH will replace or repair, as they see fit, parts which have become defective due to material or production faults.

The following are excluded from the guarantee:

- a.) Damages which occur as a result of non-observance of the assembly or operating manuals or of unauthorised repairs.
- b.) Products from which the fabrication number has been removed or destroyed.
- c.) Damages arising due to acts of God.

The guarantee certificate, completely filled out, and proof of purchase (till receipt) is required for proof of guarantee claims.

The guarantee becomes active on the day of purchase.

Please proceed as follows to process any guarantee claims arising:

- Fill out the guarantee certificate completely, including a short description of any faults.
- Provide your proof of purchase with the guarantee certificate.
- Bring the complete item (individual components see „Included in delivery“) back to your dealer, who will then deal with your guarantee claim.

This guarantee does not restrict the purchaser's defective goods rights with respect to post-fulfilment, repudiation, reduction or damage compensation against the seller.



Note

Please use the original packaging to transport the article if possible to avoid any further damage.

Guarantee certificate

Date of purchase: _____

Purchaser's address:

Dealer's address:

Dealer's stamp and signature:

Short description of faults:

Tear out or copy



